RapidCaris Cleaning Supplies Specialists NATIONAL STRENGTH - LOCAL SERVICE

MACHINE PLUS

Machine Dishwashing Detergent

Machine Plus Dish and Glass Washing Detergent is for mechanical washing of glassware, dishes and food machine equipment. Machine Plus dishwashing detergent is chlorinated, non foaming, grease cutting and emulsifying, no drying is required as Machine Plus is self-draining.

Procedure:

Washing:

- 1. Wash or scrape surplus waste food from plates.
- 2. If required, PRE-SOAK cutlery and stained cups or crockery.
- 3. Stack dishes carefully and correctly into racks.
- 4. Be sure scrap trays are properly positioned in wash tank.
- 5. Place racked dishes into machine.
- 6. Start and operate dishwasher according to manufacturers directions.
- 7. When washing and rinsing is complete, allow dishes to dry completely before removing from racks.

Dishwashing Machine Maintenance:

- 1. Empty water in wash tanks.
- 2. Clean interior of wash tank with brush & small amount of Sink Washing detergent.
- 3. Rinse the tank with clean water.
- 4. Remove curtains (if fitted) and scrub with brush and Sink Washing detergent.
- 5. Remove wash arms and remove debris from jets.
- 6. Reassemble.
- 7. Refill wash tank.
- 8. Clean exterior of machine with fine non-scratch pad and Rapid Sink Washing detergent.

1300 90 35 65



KITCHE